

DMX Address Writer Instruction

www.colordreamer.com

Step1

Connect CD-WT01 DMX output and LED Fixture DMX input together

Supply power to DMX Address Writer CD-WT01 by USB or Battery

Then press **on/off** to start the CD-WT01 tool


Step2

After Start the CD-WT01,user can find 3 functions in the menu:

1.set LED fixture 2.Set DMX Decoder 3.Color Test

Press **"MODEL "**to select **2:Set LED Fixture**


Then Press **"OK"** to enter

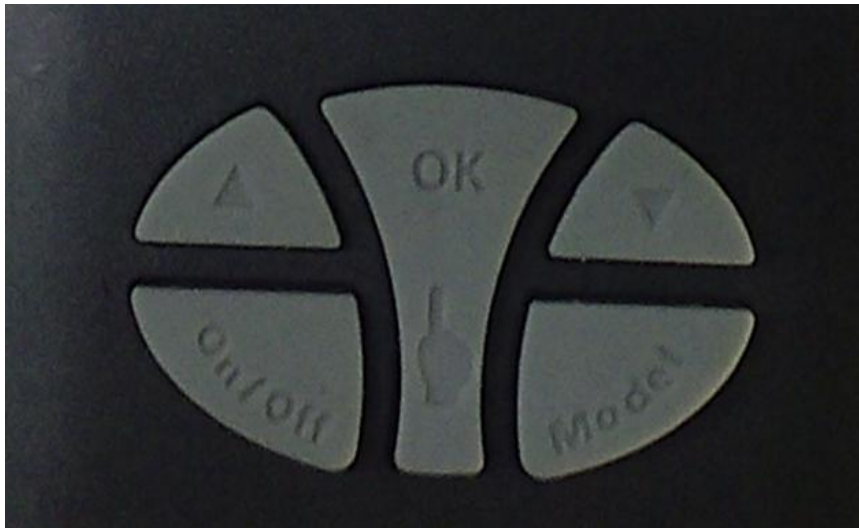

Step3:Set LED Fixture Address

You can press **UP** and **Down** to set address **offset autoincrement** according to your led fixture dmx channels,for example,1meter DMX 3D Tube ,you can set offset autoincrement to be 48

In this way,dmx address change from 1 to 49 directly after press **UP** one time

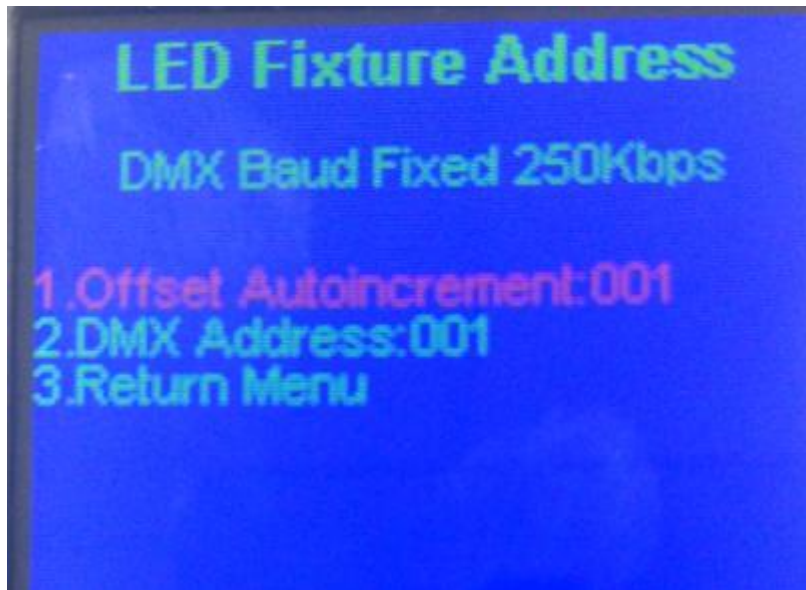

Step4:

After configuration of each item,then press **OK**

Then you can see “**Command is Done**”,this means you finish configuration sussessfully already

